


# AG-802

RS232 Gateway with data logger and LTE / GSM

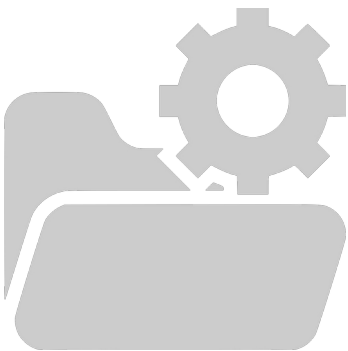

## Table of content

1. Introduction .....	4
1.1. Controlling from servers overview .....	4
1.2. Control and configuration option list .....	4
1.3. Table of supported functions by different types of interface .....	4
2. Configuration and control by internal website .....	6
2.1. Login to internal website .....	6
2.2. Pendrive .....	6
2.3. Devices – serial devices .....	6
2.4. Serial – Configuration of serial communication .....	7
2.5. Permission – Users phone number permissions and role .....	7
2.6. Cellular – Cellular network configuration .....	8
2.7. Server – TCP/IP server configuration .....	9
2.8. Server – JSON server configuration .....	9
2.9. Ethernet – Ethernet configuration .....	9
2.10. Update – Firmware update .....	10
2.11. Options – General configuration – communication and other config .....	10
2.12. Options – Gateway identification number / name .....	11
2.13. Options – Date and time configuration .....	11
2.14. Options – Factory default – reset Gateway configuration .....	11
2.15. Factory default – reset configuration .....	12
2.16. Options – GPS configuration .....	12
2.17. Config – Remote configuration from server .....	12
2.18. Access – Password configuration .....	13
2.19. Access – Password configuration .....	13
2.20. Access – User configuration .....	13
2.21. Info – Information about Gateway .....	14
2.22. Info – Digital input status .....	14
2.23. Info – Restart Gateway .....	14
3. Configuration and control by SMS .....	15
3.1. SMS overview .....	15
3.2. System commands .....	15
3.3. Server commands .....	15
3.4. GSM commands .....	16
3.5. Ethernet commands .....	16
3.6. Date, time and GPS configuration .....	16
3.7. Firmware update via URL configuration file .....	17
3.8. Configuration of update via URL configuration file .....	17
3.9. To set role and access permissions .....	17
3.10. Digital inputs status .....	18

4. Server commands .....	19
4.1. Overview .....	19
4.2. TCP/IP server commands .....	19
5. JSON format .....	20
5.1. Overview .....	20
5.2. JSON format benefits .....	20
5.3. JSON string format .....	20
6. Legal Note .....	21
6.1. Copyright .....	21
6.2. Trademarks .....	21
6.3. Disclaimer .....	21

## 1. Introduction

The AG-802 is a Gateway dedicated to work with central controlling and monitoring systems. It directly sends data from serial interface RS232 via LTE/GSM or Ethernet1 to the server. Gateway has isolated RS232 interface to communicate with weight scales, energy meters, sensors and any other RS232 devices. It also has an additional data logger function. It uses a USB flash drive for this purpose. In case of communication failure with the server, the gateway keeps a log on a flash drive and sends this data to the server when communication is regained. It can be configured by: internal website, SMS, string from server and configuration file loaded in predefined URL. For accurate time and location it has GPS and RTC.

The AG-802 has alert option with 10 mobile number list for SMS alerts. In superCap models there is power backup with power loss alert facility.

### 1.1. Controlling from servers overview

The AG-802 Gateway can be controlled via TCP commands from server. All Modbus queries can be controlled from server. In addition Gateway has support of JSON string format but limited to serial interface. JSON communication is one way communication dedicated mostly to energy meters and sensors. In case of failure of cellular communication, Gateway has capability to store records in internal memory and sending archive data to the server after communication is reestablished for continuous energy monitoring. This option is available only in JSON string format. It is not supported by TCP/IP communication. TCP/IP communication can control all modbus features, send commands and control any device in real time.

### 1.2. Control and configuration option list

Gateway can be controlled through:

- Commands from TCP/IP server
- SMS

Configuration of Gateway can be done through:

- Internal website
- Configuration file from URL
- Commands from TCP/IP server
- Configuration file from predefined URL

### 1.3. Table of supported functions by different types of interface

Sn	Functions	www	TCP/IP	SMS	JSON
1	ABC outputs direct control	√	√	√	
2	ABC outputs schedule configuration	√	√	√	
3	ABC outputs astronomical schedule configuration	√	√	√	
4	ABC output Event status checking: instant action, once action	√		√	
5	Modbus testing	√		√	


Sn	Functions	www	TCP/IP	SMS	JSON
6	Modbus configuration: address, register, ID, endian, timeout	√			
7	Modbus direct remote control		√		
8	Serial interface configuration: baud rate, data bit, parity, stop bit.	√			
9	Modbus device data		√		√
10	Modbus device archive data				√
11	Modbus direct device control from server		√		
12	Mobile number permission and roles	√		√	
13	GSM configuration: APN, user, password	√		√	
14	GSM signal strength	√	√	√	
15	Device phone number	√		√	
16	Testing mobile network: send SMS, make call	√			
17	TCP/IP server configuration: IP, port, update interval	√		√	
18	JSON server configuration: URL, token/key, update interval, archive update interval	√		√	
19	Ethernet configuration: IP, mask, gateway, DNS1, DNS2	√		√	
20	Locally update firmware by LAN	√			
21	Configuration update firmware URL	√		√	
22	Start remote update from URL		√	√	
23	Time zone configuration	√	√	√	
24	Time configuration	√	√	√	
25	Device configuration backup	√			
26	Device configuration restore	√			
27	Device configuration from URL setting	√	√	√	
28	Start device configuration from URL	√	√	√	
29	Set access via LAN, user name, password	√		√	
30	Restart Gateway	√		√	
31	Device default (factory reset)	√		√	

## 2. Configuration and control by internal website

### 2.1. Login to internal website

To enter internal website of Gateway make proper LAN connection and in browser address tab enter Gateway IP. The default IP is 192.168.10.50. User name is atreyo and password atreyo. In the main menu are:

- Pendrive – for formatting pendrive used for archive
- Devices – serial interface log
- Serial – configuration serial communication
- Permission – permission configuration for mobile numbers
- Cellular – GSM, LTE, GPRS configuration like APN, password etc.
- Server – server configuration
- Ethernet – Ethernet configuration
- Update – upload firmware and remote update configuration
- Options – for date, time, location, default etc.
- Config – backup, restore and remote configuration.
- Access – access configurations for internal website
- Info – main page with information about model, firmware version etc.

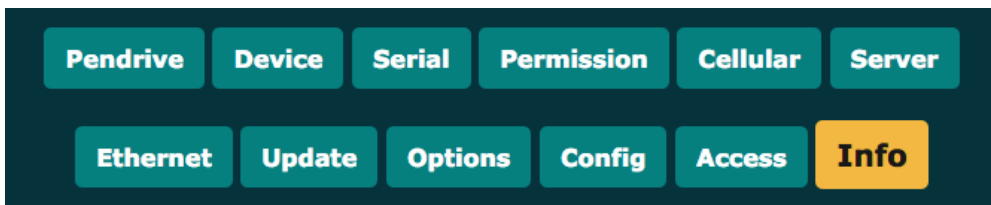


### 2.2. Pendrive

This section is for formatting pendrive in proper way for log. Of course, you can format the flash drive in FAT format on your computer, but it is better to do this in Gateway.

 A screenshot of the 'Prepare pendrive' form. At the top, there is a teal header with the text 'Prepare pendrive'. Below the header, the text reads 'Enter **Atreyo** below, to prepare pendrive for archive.' Underneath this text is a label 'Confirm:' followed by an empty white input field. At the bottom right of the form is a green button labeled 'Prepare'.

### 2.3. Devices – serial devices


Here is a window with the data coming from the serial interface.

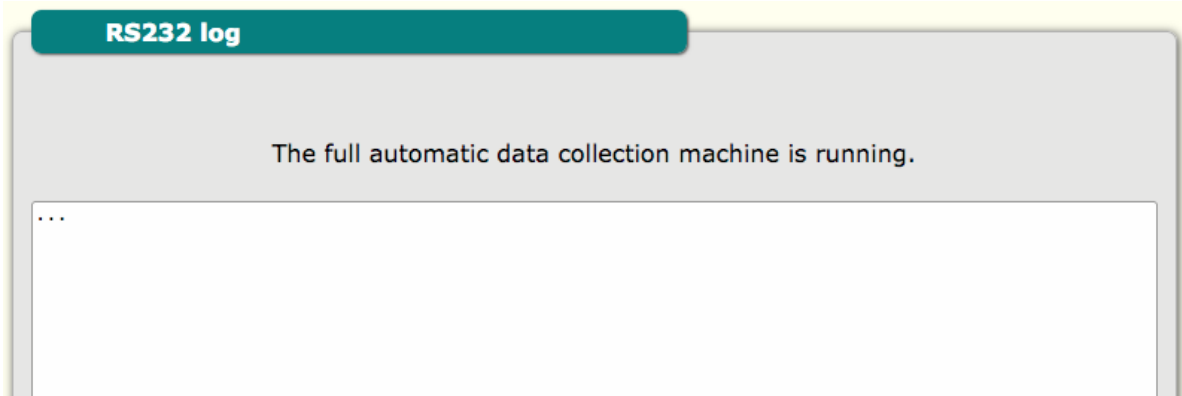

## 2.4. Serial – Configuration of serial communication

In this section are RS485 parameter configuration: baud rate, data bit, parity and stop bit.

Sn	Parameter	Option/range
1	Baudrate	2400 to 460800
2	Data bit	8, 9
3	Parity	None, Even, Odd
4	Stop bit	1, 1.5, 2

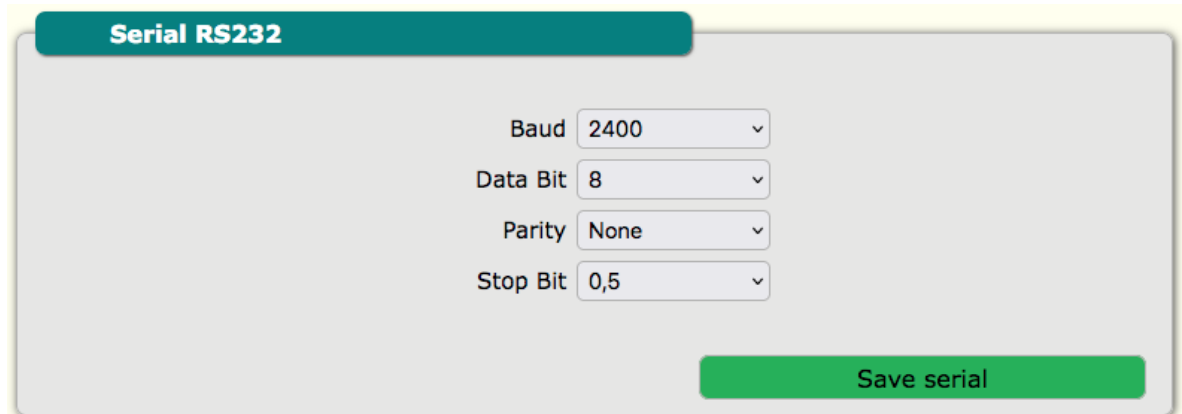

## 2.5. Permission – Users phone number permissions and role

This tab is for permissions of mobile numbers to protect from unauthorised access via SMS commands. By default any number can access Gateway but after input of any number only number from list is able to control Gateway. Mobile number has roles of "normal" and "emergency". Normal role allow to make control of Gateway, and emergency in addition is the emergency number for alerts. In AG-801 digital inputs high status is event for emergency SMS. It is possible to add maximum 13 telephone numbers. Number format with + before country prefix.

**Mobile number role configuration**

Phone number	Status
+917474718491424	Normal
+917474718491455	Emergency

## 2.6. Cellular – Cellular network configuration

Configuration for mode of connection. Default is auto. But if you are using a SIM card that has only GPRS available, set the connection type to GPRS. If it has only LTE then select LTE and if it has both then you can leave it at auto.

**Cellular network mode selection**

Operating mode:  Auto  
 GPRS  
 LTE

**Save mode**

GSM configuration include: APN, user and password.

**APN user and password**

APN:

User:

Password:

**Save GSM parameters**

Gateway phone number it is Gateway SIM card phone number. It is not necessary to provide this, but in future this information is accessible by TCP/IP and for maintenance is good practice to add this number.

**Gateway phone number**

Device phone number:

**Save device phone number**

Cellular network testing is for testing of SIM card and network. You can add your number and Gateway will call or send SMS to this number. For this purpose, call and SMS support must be enabled with the mobile operator.



**Testing call and SMS service**

Enter the phone number:

Send SMS status
Make a call

## 2.7. Server – TCP/IP server configuration

TCP/IP server configuration section is for configuration of: server IP, server port and update interval.

**TCP/IP server configuration**

Server TCP IP:

Server TCP port:

Update interval [s]:

Save parameters

## 2.8. Server – JSON server configuration

JSON server configuration section is for configuration of server URL, token/key, update interval and archive update interval.

**RTU section JSON format**

Server URL:

Token/key:

Updation interval [s]:

Archive updation interval [s]:

Save parameters

## 2.9. Ethernet – Ethernet configuration

Ethernet configuration for LAN. Default value is:

IP = 192.168.10.50, Mask = 255.255.255.0, Gateway = 192.168.10.1, DNS1 = 8.8.8.8, DNS2 = 8.8.4.4

**Ethernet configuration**

IP:

Mask:

Gateway:

DNS1:

DNS2:

**Save ethernet**

## 2.10. Update - Firmware update

This section is for firmware update. The Gateway can update firmware from remote URL and locally direct by uploading BIN file with proper firmware. To load firmware click load firmware file and select firmware. After loading Gateway will automaticity restart. Firmware update in normal condition will not reset configuration.

**Upload firmware locally**

...

**Click to load firmware file**

Remote file update configuration is for update from server. It is possible to start update from server by click "update" button or remotely by TCP/IP string from server.

**Update remotely from the server**

Update file URL:

**Update** **Save parameter**

## 2.11. Options - General configuration - communication and other config

This section is for general configuration. Time zone configuration and enable/disable GSM network. Also here is an option to synchronize the Gateway RTC time with NTP servers. You can choose between LTE/GSM NTP server and LAN NTP server and none. LAN NTP server can be used when your network is not connected to the Internet. Then we should run the NTP server on the local server. In addition, the time can be set via SMS or commands from the server.

**General configuration**

Connection via interface

GSM

Time Zone

Synchronizing time

LAN NTP IP server

## 2.12. Options - Gateway identification number / name

This is an option for additional identification of the device from the server side. You can enter your device ID here.

**Gateway identification number / name**

Device ID:

## 2.13. Options - Date and time configuration

This section is for configuration of real time clock in Gateway. The time is taken from the time that is currently set on the computer.

**Time and date of the gateway**

SYSTEM PC TIME: 2022-06-11 23:00:03

DEVICE DATE TIME:

## 2.14. Options - Factory default - reset Gateway configuration

This section is for configuration real time clock in Gateway. The time is taken from the time that is currently set on the computer.

### Time and date of the gateway

SYSTEM PC TIME: 2022-06-11 23:00:03  
 DEVICE DATE TIME:

Set date time in device

## 2.15. Factory default – reset configuration

To make default all configurations of Gateway for safety reason type "Atreyo" in the tab and press "set default values".

### Gateway configuration reset - default

Enter **Atreyo** below, to set the gateway to default values.

Confirm:

Set default values

## 2.16. Options – GPS configuration

Device GPS location tab is for configuration of Gateway location. In AG-802 there is inbuilt GPS but some time in case of problems with the GPS signal need to be selected "Manual GPS ON". This is necessary for the correct configuration of the astronomical schedule.

### GPS localization of gateway

Manual GPS

Latitude:

Longitude:

[Find out how to enter coordinates](#)

[Atreyo headquarter Latitude:23.033537, Longitude:72.524789](#)

Save GPS options

## 2.17. Config – Remote configuration from server

To backup all configuration of Gateway use this tab. Configuration file has checksum do not edit configuration file manually. Use dedicated Atreyo software.

**Backup configuration**

[Download configuration file](#)

For loading previous saved configuration from computer, select and load file:

**Restore configuration**

...

Click to select configuration file

**2.18. Access – Password configuration**

This tab is for configuring URL of remote file with Gateway configuration. By clicking "get configuration" URL device will update from remote file.

**Configuration from server**

Config file URL:

Get configuration from URL

Save config URL

**2.19. Access – Password configuration**

This section is for internal website. Default password is atreyo.

**Change password**

User:

Password:

New password:

Retype new password:

Save

**2.20. Access – User configuration**

For user change. Default user is atreyo.

**Change user name**

User:


Password:

New user name:

Retype new user name:

## 2.21. Info - Information about Gateway

This is information screen about AG-802

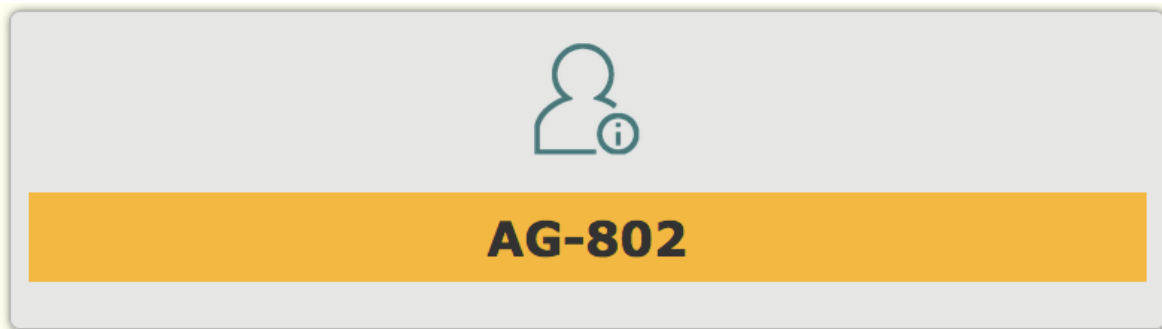

## 2.22. Info - Digital input status

In this tab from info section can test digital input status.

STATE OF INPUTS

A:

B:

## 2.23. Info - Restart Gateway

By this tab you can restart Gateway.

RESTART DEVICE

## 3. Configuration and control by SMS

### 3.1. SMS overview

Many functions of the Gateway can be controlled by SMS commands. Remember that the SMS function is available from your cellular operator in the SIM in Gateway. Gateway responds to each command with an SMS informing that it will execute the command. SMS commands in server address configuration and password configuration are case sensitive. For all other commands it is case insensitive. The Gateway after processing command will send reply by SMS with confirmation.

### 3.2. System commands

Sn	Description	Command	Example
1	For status of Gateway, serial number etc.	STATUS	
2	To restart Gateway	RESTART	
3	To get info about some important commands	HELP	
4	Erasing whole data aggregating from Modbus devices	ERASEARCHIVE	
5	Make device default factory configuration	MAKEDEFAULT	
6	To set Gateway ID	MYID=	MYID=AG811-1
7	To get info about Gateway ID	MYID?	
8	Not in use	NAME=	
9	Not in use	NAME?	
10	Not in use	ADMIN=	
11	Not in use	ADMIN?	
12	Not in use	DEVUSER=	
13	Not in use	DEVUSER?	

### 3.3. Server commands

Sn	Description	Command	Example
1	To set server IP	SERVERIP=	SERVERIP= 231.23.4.216
2	To get info about server IP	SERVERIP?	
3	To set server port	SERVERPORT=	SERVERPORT=7301
4	To get info about server port	SERVERPORT?	
5	Poll time for TCP/IP poll. Format in seconds	SLTPOLL=	SLTPOLL=30
6	To get info about polling time configuration for TCP/IP	SLTPOLL?	
7	To set JSON server address	RTUSERVER=	http://example.com/rtu
8	To get info about JSON server address	RTUSERVER?	
9	To set token for JSON server	RTUTOKEN=	RTUTOKEN=kjakaj567\$
10	To get info about JSON server	RTUTOKEN?	
11	Poll time for RTU section. Format in seconds	RTUPOLL=	RTUPOLL=15

Sn	Description	Command	Example
12	To get info about poll time for RTU section.	RTUPOLL?	
13	Poll time for RTU archive data section. Format in seconds	RTUPOLLARCH=	RTUPOLL=60
14	To get info about poll time for archive data from RTU	RTUPOLLARCH?	

### 3.4. GSM commands

Sn	Description	Command	Example
1	To set APN for internet connection.	APN=	APN=internet
2	To get info about APN for internet connection	APN?	
3	To set APN user name for internet connection	APNUSER=	APNUSER=internet
4	To get info about APN user name for internet connection.	APNUSER?	
5	To set APN password for internet connection	APNPASS=	APNPASS=password
6	To get info about APN password for internet connection.	APNPASS?	

### 3.5. Ethernet commands

Sn	Description	Command	Example
1	Set LAN IP of AG-802	LANIP=	LANIP=192.168.10.50
2	To get info about LAN IP	LANIP?	
3	To set LAN mask	LANMASK=	LANMASK=255.255.255.0
4	To get info about LAN mask	LANMASK?	
5	Set LAN Gateway	LANGATE=	LANGATE=192.168.10.1
6	To get info about LAN Gateway	LANGATE?	
7	Set DNS Primary	LANDNS1=	LANDNS1=8.8.8.8
8	To get info about LAN primary DNS	LANDNS1?	
9	Set DNS Secondary	LANDNS2=	LANDNS2=8.8.4.4
10	To get info about LAN secondaryDNS	LANDNS2?	
11	To get all info about network parameters	LAN?	

### 3.6. Date, time and GPS configuration

Sn	Description	Command	Example
1	To set Gateway time. Always in format: HHMMSS or HH:MM:SS the dividing sign is meaningless - always format 24H	SETTIME=	SETTIME=060129 or SETTIME=06:01:29
2	To get info about internal RTC time	GETTIME?	
3	To set Gateway date. Always in format: YYYYMMDD or YYYY/MM/DD. The dividing sign is meaningless.	SETDATE=	SETDATE=20210218 or SETDATE=2021/02/18
4	To get info about RTC date	GETDATE?	
	To get info about internal RTC time and date	GETDATETIME?	



Sn	Description	Command	Example
5	To set GPS manual (simulates hardware GPS)	GPSMANUAL=ENABLE or GPSMANUAL=E	
6	To set off GPS manual (simulates hardware GPS)	PSMANUAL=DISABLE or PSMANUAL=D	
7	To set latitude	GPSMANLAT=	GPSMANLAT=50.313168
8	To set longitude	GPSMANLONG=	GPSMANLONG=18.887417
9	To get info about longitude and latitude	GPS?	

### 3.7. Firmware update via URL configuration file

Sn	Description	Command	Example
1	Command for start update from URL address	UPDATEGO=1	
2	Set URL address where is firmware file	UPDATEURL=	UPDATEURL=http:// example/update/gateway/
3	To get info about firmware update URL	UPDATEURL?	

### 3.8. Configuration of update via URL configuration file

Sn	Description	Command	Example
1	Command for start update from URL address	CONFIGGO=1	
2	Set URL address of config file	CONFIGURL=	CONFIGURL=http:// example/config/gateway/
3	To get info about URL address of config file	CONFIGURL?	

### 3.9. To set role and access permissions

After the default configuration of the device has an empty list, when someone adds a mobile number, this number gives the permission to add another one. (website config)

Sn	Description	Command	Example
1	Show list of enabled phone numbers with status, "emergency" status means alert notification - for inputs IN1 and IN2	USERLIST?	
2	Add user phone number to list with function - exception notification	USERADD=	USERADD=+919936612345- E
3	Add user phone number for access to device	USERADD=	USERADD=+919936612345
4	Remove this phone number from the list	USERDEL=	USERDEL=+919936612345
5	set user name for access to internal website	HTTPUSER=	HTTPUSER=admin
6	show user name for access to internal website	HTTPUSER?	
7	Set password for access to internal website	HTTPPASS=	HTTPPASS=atreyo
8	Show password for access to internal website	HTTPPASS?	
9	Show user name and password for access to internal website	HTTPACCESS?	

### 3.10. Digital inputs status

Sn	Description	Command	Example
1	To get status of digital inputs (reply will be like: INPUT A=ON B=OFF)	GETINPUTS?	

## 4. Server commands

### 4.1. Overview

Gateway's main real time communication format is TCP/IP. All ON/OFF, digital inputs, most of other functions and configurations can be done from server by this protocol. The string format is small to provide quick response from Gateway. In the TCP/IP format it is possible to control Modbus interface from server.

### 4.2. TCP/IP server commands

Server command are in separate API document. Go to [product page](#) for download

## 5. JSON format

### 5.1. Overview

The gateway is capable of sending the Modbus slave device's data to the server in JSON string format. The implementation of JSON is a very easy task on server side.

### 5.2. JSON format benefits

- Easy to use and interpret data
- Have built in device id and time stamp for easy traceability
- Faster data parsing
- Archive data availability

### 5.3. JSON string format

The JSON string format is provided in separate document.

## 6. Legal Note

### 6.1. Copyright

Copyright © 2022 Atreyo Research and Development LLP. This technical specification is protected under national and international copyright laws. No part of this user manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Atreyo Research and Development LLP. Copy or use any part of this specifications is prohibited without the prior written permission from the Atreyo Research and Development LLP. Atreyo Research and Development LLP shall not unreasonably withhold or deny such consent but shall be entitled to receive additional equitable remuneration in connection with its grant of consent.

### 6.2. Trademarks

Atreyo and the Atreyo logo are registered trademarks of Atreyo Research and Development LLP.

All other trademarks and copyrights are the property of their respective owners.

### 6.3. Disclaimer

- All dimensions mentioned in the drawings are not to scale and may vary/differ due to construction contingencies and site conditions which are subject to change as may be decided by the company.
- The specifications and amenities mentioned in this document and promotional documents are only representational and informative. The descriptions in this specification are based on the default configuration of your device.
- Images used in this specification may differ in appearance from the actual product.
- The Atreyo Research and Development LLP reserves rights to make additions, deletions, alterations or amendments as and when it deems fit and proper, without any prior notice.

**Atreyo Research & Development  
LLP**

**+91 9727741417  
info@atreyo.in**

414, Sunrise Mall, Mansi Circle,  
Vastrapur  
Ahmedabad 380015, India